





WinBox v3.11 (Addresses)	– 🗆 X		
Connect To: 6C:3B:6B:C1:A8:38 Login: admin Password: Add/Set Connect To RoMON Connect	✓ Keep Password ○ Open In New Window		Mikrotik 路由器 配置步骤
Managed Neighbors 1 Refresh MAC Address Identity Version	3 Find all F		
6C:3B:6B:C1:A8:38 192.168.88.1 MikroTik 6.38.1 (stable)	RB952Ui-5ac2nD	 配置步骤: 1.按上图指示说明,连动 2.浏览器上输入 <u>http://edcwifi.com/s</u>zip,下载登录工具 v 3.打开 winbox 之后显远设备扫描列表 4.选择扫描列表发现的 5.点击 Connect 连接设备 	接好设备,等待设备成功启 support/Video/winbox3.11. vinbox 示如左图,点击选择1处进入 设备2处(MAC地址) 备,进入系统配置界面
1 item (1 selected)			

Sadmin@6C:3B:6B:C	1:A8:38 (MikroTik) - WinBox v6.38.1 on hAP ac lite (mipsbe) — 🗆 🗙	
Session Settings Da	ishboard	
Safe Mode	Session: 6C:3B:6B:C1:A8:38	
hand Quick Set		Mikrotik 路由器
I CAP SMAN		
Interfaces	RouterOS Default Configuration	配置步骤
I Wireless		
Bridge	The following default configuration A has been installed on your router:	
🚅 PPP	Rentes Hada:	
🕎 Switch	* WAN port is protected by firewall	
°t [©] Mesh	* Wireless interfaces are part of	
1 IP	LAN bridge * IP address 192.168.88.1/24 is set	第一次进入路由器,会询问您是否需
🖉 MPLS 🗈 🗅	on LAN port	要默认配置,弹出初始框
🐹 Routing 🗈 🗈	mode: ap-bridge;	Remove Configuration:
💮 System 🗈	bana. 2gh2=b/g/n; ht=chains: 0, 1;	清除默认配置
👰 Queues	ht-extension: 20/40mhz-Ce; wlan2 Configuration:	Show Script:
Files	mode: ap-bridge; band: 5ghz=a/n/ac;	查看默认配置脚本
E Log	ht-chains: 0; ht-setension: 20/40/80mhr-Cone, M	ОК:
🔀 🥵 Radius	Int extension. 20/40/00mint ceee, *	保留默认配置
R 💥 Tools 🗈	Remove Configuration Show Script OK	
들 📰 New Terminal		这里请选择 Remove Configuration,
MetaROUTER		清除配置。
💍 🦺 Partition		
🛅] Make Supout.rif		
Manual		
🖉 🍥 New WinBox		

WinBox v3.11	- D >		
File Tools Connect To: SC:3B:6B:C1:AB:38 Login: admin Password: Router 6C:3B:6B:C1:A8:38 has been disconnected 00:00:03 ago	Keep Passw Reconnect Cancel	ord	Mikrotik 路由器 配置步骤
		清除配置之后, 进入右图显示界 (重连)即可	winbox 会与设备断开连接, 早面,这里只需点击 Reconnect

Sadmin@6C:3	B:6B:C1	:A8:38 (MikroTik) - WinBox v6.38.1 on hAP ac lite (mipsbe)	
Session Setting	gs Das	hboard	1.选择 Quick Set
Safe I	Mode	Session: 6C:3B:6B:C1:A8:38	(快速设置向导)
auick Set 🄏			
🚊 CAP SMAN			
🔚 Interface	5	CPE Quick Set CAP	
🗐 Wireless		CPE Home AP Dual	
😹 Bridge		PTP Bridge wTSP AP ess: 6C:3B:6B:C1:A8:3C	2.在快速向导窗口
📑 PPP		LAN MAC Address: 6C:3B:6B:C1:A8:37	进校 11 11 11 11 11 11 11 11 11 11 11 11 11
🕎 Switch			远挥 Home AP 侠八
°13 Mesh		- Wireless	
255 IP	1	Country: no_country_set	
Ø MPLS	4	Channel Width: 20MHz ∓	Quick Set
😹 Routing	1	Address / Networ Channel Pro 🔻	Warning:conectivity could be lost while changing modes. Are you sure?
🛞 System	1	P 1C:60:DE:07:A5:92 PFY 2437/20−eC/gn 802.11 -68 ◆ P 46:D9:E7:69:54:BD EDCwifi 2437/20/gn 802.11 -77	Y ₁
Queues		P 46:D9:E7:69:55:04 EDCwifi 2412/20/gn 802.11 -78	
Files		P 46:D9:E7:69:57:A7 EDCwifi 2437/20/gn 802.11 -72	
		P 46:D9:E7:69:57:EE EDCwifi 2437/20/gn 802.11 -79 PR 6C:38:68:14:07:EE CAP-Ma 2412/20-Ca/m 802.11 -68	
Log		P 80:2A:A8:4A:FF:C2 EDCwifi 2412/20/gn 802.11 -74	3. 点击 Yes
Madius .		P 80:2A:A8:84:0E:BD EDCwifi 2462/20/gn 802.11 -44	備认模式切换
X Tools	1	P 9C:21:6A:C1:8C:5C 777 2462/20-eC/gn 802.11 -89 ◆	
📰 New Termi	nal		



- Internet Address Acquisition: O Static O Automatic O PPPoE PPPoE User: PPPoE Password: PPPoE Service Name:	接入方式为: ADSL 拨号
PPPoE Status: Reconnect IP Address: Gateway:	外网设置: PPPOE User:填入运营商提供的帐号 PPPOE Password:填入运营商提供的密码
MAC Address: 6C:3B:6B:C1:A8:37	勾选此选项会生成默认的防火墙安全规 则,如需额外设置限速请勿勾选
- Local Network IP Address: 192.168.88.1 Netmask: 255.255.255.0 (/24) ✓ DHCP Server DHCP Server Range: 192.168.88.2-192.168.88.254 ✓ NAT ✓ UPnP	内网网设置:(如无额外需求,请按左图填写) IP Address:内网网关地址 Netmask:子网掩码 DHCP Server:是否启用 DHCP 服务器 DHCP Server Range:分配给上网主机的 IP 地 址范围 NAT:网络地址转换,必选 UPnP:端口转发,建议勾选 Bridge All LAN Ports:桥接所有 LAN 口,使其

- Internet Address Acquisition: IP Address: Netmask: Gateway:	C Static C Automatic C PPPoE Renew Release		接入方式为: DHCP 自动获取
MAC Address: - Local Network	6C:3B:6B:C1:A8:37 Firewall Router 192.168.88.1		勾选此选项会生成默认的防火墙安全规则,如需额外设置限速请勿勾选
Netmask: DHCP Server Range:	255.255.255.0 (/24) ✓ DHCP Server 192.168.88.2-192.168.88.254 ✓ NAT ✓ UPnP		内网网设置:(如无额外需求,请按左图填写) IP Address: 内网网关地址 Netmask: 子网掩码 DHCP Server: 是否启用 DHCP 服务器 DHCP Server Range: 分配给上网主机的 IP 地 址范围 NAT: 网络地址转换,必选 UPnP: 端口转发,建议勾选
		' I	Bridge All LAN Ports:桥接所有 LAN 口,使为一个内网,无特别需求建议勾选





深圳捷联讯通科技有限公司

www.edcwifi.com.cn



电话:	0755-82642594	邮箱:	marketing@edcwifi.com
<u> </u>		1 1 1 H 1 H 1	

传真: 0755-28401365 服务时间: 9:00 - 21:00

邮编: 518172 QQ 号: 510239069

技术售后专线: 0755-28401165/0755-28401265

地址:深圳市龙岗区龙岗街道向银路 35 号 1 栋 301 (安旭商务园内)

电话: 0755-82642594/82642493

维基知识库: http://wiki.edcwifi.com



www.edcwifi.com.cn





深圳捷联讯通科技有限公司